

Power Distribution Unit (PDU)

LIS-0216 (AM/EU/C13)

LIS-0316 (AM/EU/C13)

LIS-0416 (AM/EU/C13)

User Manual





User Notice

All information, documentation, and specifications contained in this manual are subject to change without prior notification by the manufacturer. The manufacturer makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties as to merchant ability or fitness for any particular purpose. Any of the manufacturer's software described in this manual is sold or licensed as is. Should the programs prove defective following their purchase, the buyer (and not the manufacturer, its distributor, or its dealer), assumes the entire cost of all necessary servicing, repair and any incidental or consequential damages resulting from any defect in the software.

The manufacturer of this system is not responsible for any radio and/or TV interference caused by unauthorized modifications to this device. It is the responsibility of the user to correct such interference.

The manufacturer is not responsible for any damage incurred in the operation of this system if the correct operational voltage setting was not selected prior to operation. PLEASE VERIFY THAT THE VOLTAGE SETTING IS CORRECT BEFORE USE.

Package Contents

The PDU Series package consists of:

- 1 Power Distribution Unit
- 1 Power Cord
- 1 Mounting Kit

Check to make sure that all of the components are present and in good order. If anything is missing, or was damaged in shipping, contact your dealer.

Read this manual thoroughly and follow the installation and operation procedures carefully to prevent any damage to the switch or to any other devices on the PDU installation.

Contents

- About This Manual.....1
 - Conventions.....1
- Chapter 1. Introduction.....2**
 - PDU Series Comparison Chart.....3
 - Features.....4
 - Components.....5
- Chapter 2. Hardware Setup.....7**
 - Before You Begin.....7
 - Installation.....7
- Chapter 3. Basic Operation and First Time Setup.....9**
 - First Time Setup.....9
 - Network Configuration.....10
 - Changing the Administrator log-in.....11
- Chapter 4. Browser Operation.....13**
 - Logging In.....13
 - The PDU Main Page.....13
 - Page Components.....14
 - Socket Access.....13
 - Control.....13
 - Statistics.....14
 - Setting.....14
 - About.....25
 - Logs.....25
- Appendix**
 - Safety Instructions.....28
 - Rack Mounting.....30
 - IP Address Determination.....31
 - Specifications.....32

About This Manual

This User Manual is provided to help you get the most from your PDU system. It covers all aspects of installation, configuration and operation. An overview of the information found in the manual is provided below.

Chapter 1, *Introduction*, introduces you to the PDU system. Its purpose, features and benefits are presented, and its front and back panel components are described.

Chapter 2, *Hardware Setup*, provides step-by-step instructions for setting up your installation.


Chapter 3, *Basic Operation and First Time Setup*, explains the procedures that the Administrator employs to set up the PDU network environment, and change the default user name and password.

Chapter 4, *Browser Operation*, describes how to log in to the PDU with an internet browser, and explains the layout and components of the PDU's user interface.

Appendix, provides specifications and other technical information regarding the PDU.

Conventions

This manual uses the following conventions:

Symbol	Indicates text that you should key in.
[]	Indicates keys you should press. For example, [Enter] means to press the Enter key. For keys that need to be entered at the same time, they are placed in the same square brackets, and the keys are connected with a plus sign. For example: [Ctrl+Alt].
1.	Numbered lists represent procedures with sequential steps.
◆	Bullet lists provide information, but do not involve sequential steps.
→	Indicates selecting the option (on a menu or dialog box, for example), that comes next. For example, Start → Run means to open the <i>Start</i> menu, and then select <i>Run</i> .
	Indicates critical information.

Chapter 1

Introduction

Overview

The new-generation intelligent power distributor (PDU) can effectively and conveniently improve the efficiency of power management. A Smart PDU is an intelligent power distributor that contains 2/3/4 AC sockets and provides IEC sockets.

These power distributors can safely, centrally and intelligently manage power (on, off, cycle) in home, garage, monitoring, shopping mall, yard, traffic, road and bridge application scenarios, and monitor power equipment using sensors.

The Smart PDU power distributor provides remote power management and real-time power measurement functions. It allows you to control and monitor the power status of an entire PDU or individual sockets online through TCP/IP from any place. Can be set separately for each group of socket power state, so that users can switch each group of equipment, Real-time display of current and voltage power consumption.

Installation and operation of this product is quick and easy: just plug the cable into the corresponding connection port, and use the user-friendly browser interface for setting and management. Since PDU supports firmware updates over the network, you can download the latest version of firmware from the company website to ensure the latest product improvements.

A Smart PDU is equipped with circuit breaker alarms. When a trip occurs, a Smart PDU can sound an alarm or send email alarm. This feature provides faster response time to recover servers and other equipment when power is lost due to current overload.

PDU Series Comparison Chart

Model	Power Cord	Outlets	Monitoring Level	Amps	
				Per Port	Total
LIS-0216AM	IEC C14	American	PDU	10A	16A
LIS-0316AM	IEC C14	American	PDU	10A	16A
LIS-0416AM	IEC C14	American	PDU	10A	16A
LIS-0216WN	IEC C14	IEC C13	PDU	10A	16A
LIS-0316WN	IEC C14	IEC C13	PDU	10A	16A
LIS-0416WN	IEC C14	IEC C13	PDU	10A	16A
LIS-0216EU	IEC C19	EU	PDU	10A	16A
LIS-0316EU	IEC C19	EU	PDU	10A	16A
LIS-0416EU	IEC C19	EU	PDU	10A	16A

Note: For complete specifications for each model, please refer to the product specification sheet.


Features

- ◆ Remote users can monitor PDU and loop status on web pages
- ◆ Support safe shutdown function
- ◆ Each device has its own power supply and socket. The user interface can be accessed even when the overload state triggers the automatic power-off switch on this device
- ◆ Fire surge protection, reduce the risk of fire caused by surge.
- ◆ Remote power management via TCP/IP and built-in 10/100 Ethernet port
- ◆ Support network communication protocols: TCP/IP, UDP, HTTP,HTTPS、DHCP,10BASE-T /100Base-TX, Ping
- ◆ Individual power sockets can be controlled locally and remotely (open, close, cycle switch)
- ◆ Power on sequence - The user can set the power on sequence and the delay time for each socket so that the device can be turned on in the appropriate sequence
- ◆ It can be easily set and operated through the browser interface
- ◆ Support for multiple browsers (IE, Mozilla, Firefox, Chrome, Safari, Opera, Netscape)
- ◆ It can measure the power status of the PDU loop of the whole power distributor
- ◆ Current and voltage critical setting
- ◆ Provides the socket naming function
- ◆ Support activity log
- ◆ Supports firmware upgrade
- ◆ Support multiple languages: English, simplified Chinese
- ◆ Configurable mail notification feature to keep your system notified of changes in status
- ◆ Flexible mounting design for easy mounting on structured wiring enclosures, walls or behind tables and televisions.
- ◆ Supports SNMP, MODBUS management
- ◆ RTC supports timer operation in the absence of power supply


- ◆ Support multi-user Settings, and multi-user different management rights Settings
- ◆ Support PDU energy usage statistics, quickly understand the usage of electrical equipment through graphics
- ◆ PDU Exterior The PDU provides LCD Displays to visually display the operating status of ports and hosts
- ◆ Dynamic password verification in the login window enhances user login security verification
- ◆ You can add and query scheduled tasks to make work plans for PDU port sockets in advance
- ◆ Displays current and voltage alarms on the home page, and queries historical records of PDU anomalies
- ◆ Support zero meter clearing function
- ◆ Support the current, power, and power factor detection of each power supply separately output port
- ◆ Support separate port set threshold warning and power off Settings to protect the safety of electrical devices

Components


LIS-0416AM Front View

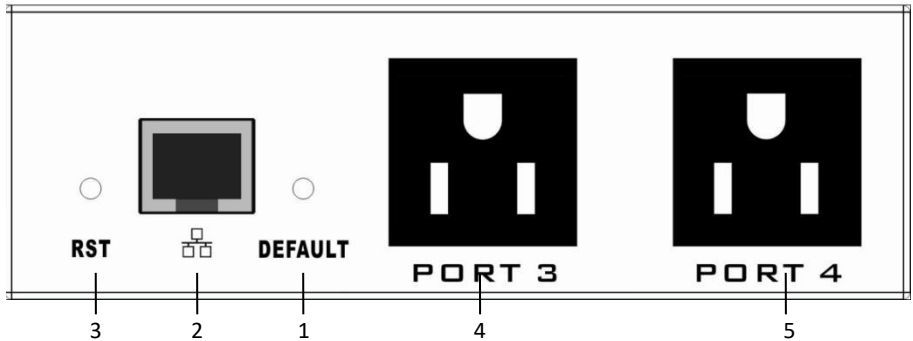


LIS-0416AM Rear View

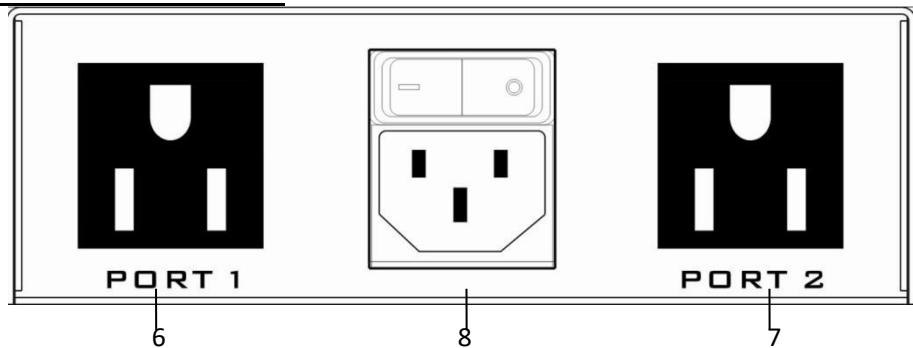


LIS-0416AM Top View

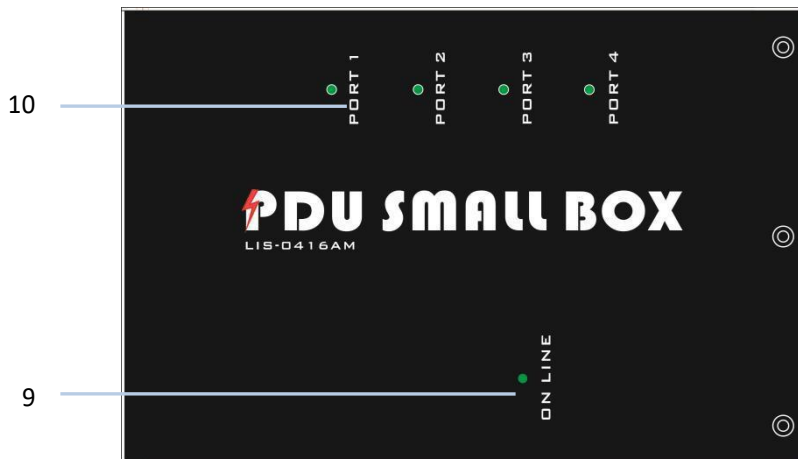


LIS-0416WN Front View:

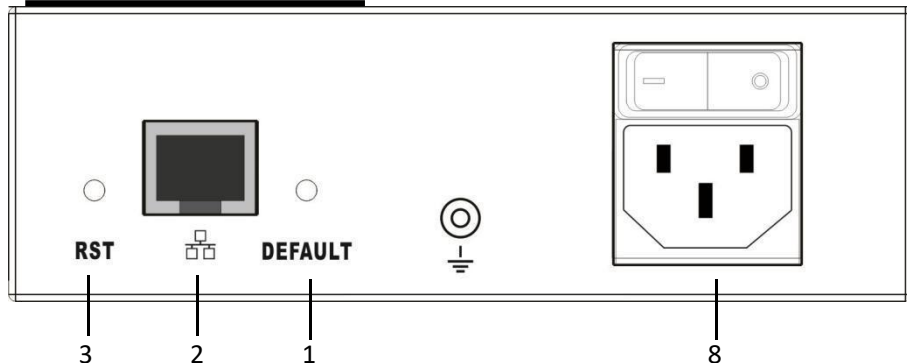


LIS-0416WN Rear View:

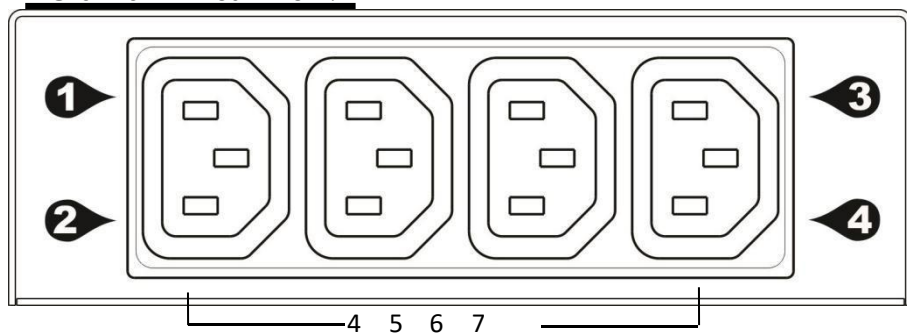


LIS-0416WN Top View:

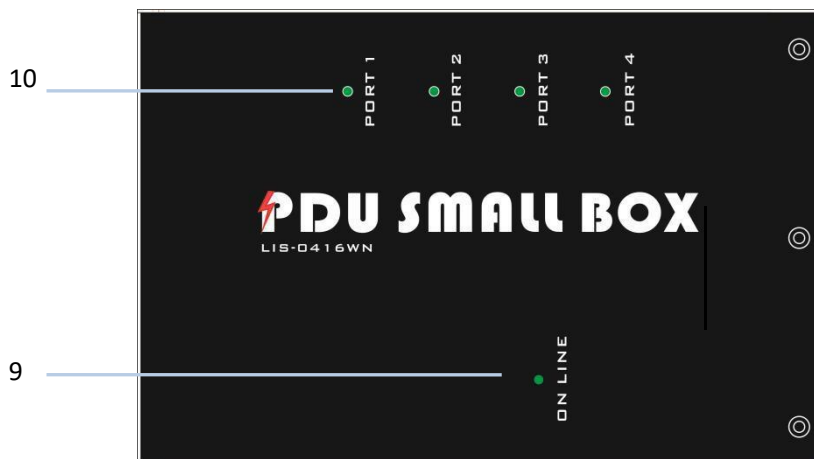

LIS-0416EU Front View:

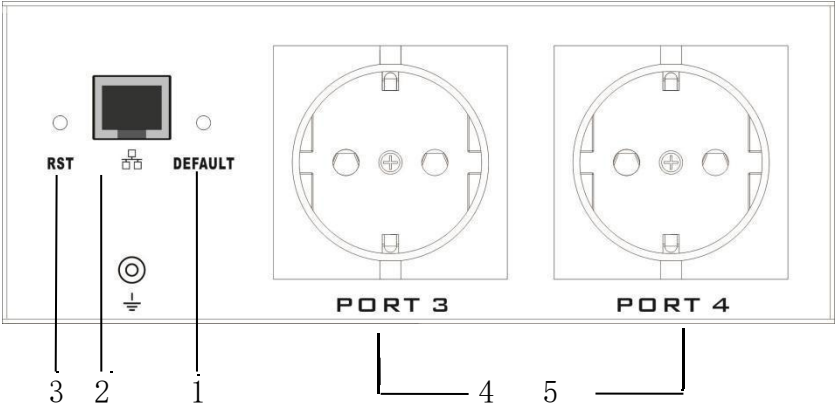


LIS-0416EU Rear View:

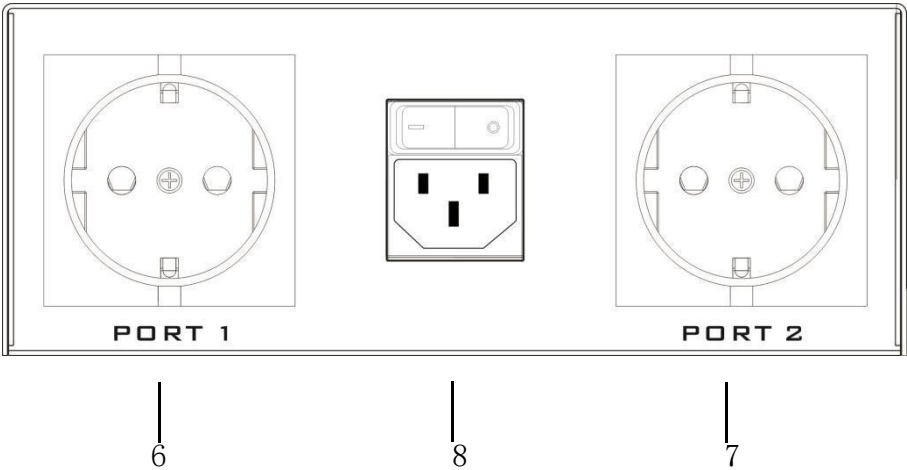

LIS-0416EU Top View:

10
|

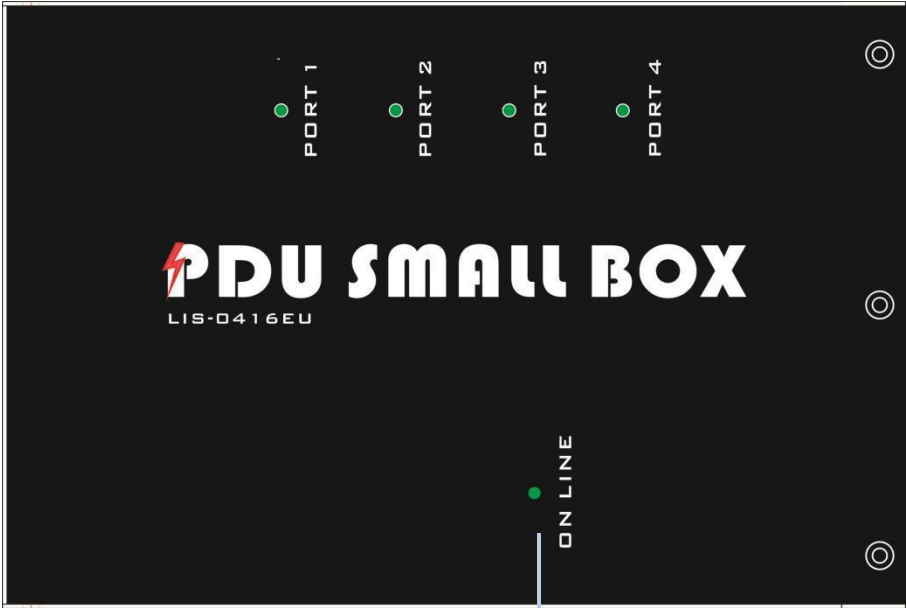

9
|

No.	Item	Descriptio
1	Defaults Switch	<p>This switch is recessed and must be pushed with a thin object, such as the end of a paper clip</p> <p>You can press this button and hold it for more than 3 seconds to reset the PDU to factory default values</p> <ul style="list-style-type: none">● Release this switch and restart the device to take effect.
2	LAN Port	It can connect to 10M/100M Ethernet network. Control and access PDUs
3	Reset Switch	Hold down the key to restart the PDU

4 5 6 7	Power outlet socket I	Each power socket can be connected to a device with the current less than 10A. The total output power is less than 16A. If the power output exceeds the maximum load, the PDU and the device may be damaged and the circuit breaker protection function may be triggered.
8	16A power input socket	Please insert the power cable to the AC power supply here. This power input socket is equipped with a switch setting. When the power cable is connected and the power switch is turned on, the PDU can be put into working state.
9	Working LED	Indicates the PDU working status
10	Port LEDS	Indicates the working status of each PORT on a

This Page Intentionally Left Blank

Chapter 2

Hardware Setup

Before You Begin



1. Important safety information regarding the placement of this switcher is listed in the appendix for safety tips, please refer to this information before operation.
2. Before installation, ensure that the power supply of all devices to be connected is turned off.

A PDU can be installed in an indoor distribution box or on a wall. To install a PDU in the above positions, use the fasteners and screws delivered with the DEVICE to secure the PDU to a specific position.

Installation

To install a PDU, perform the following operations:

1. Properly ground the PDU using ground cables. Connect one end of the grounding cable to the grounding terminal and the other end to the appropriate grounding object.

Note: Do not omit this step. Proper grounding can avoid damage caused by surge or static electricity

2. For each group of devices to be connected, use their power cables to connect the AC socket of the device to the available socket on the PDU.
3. Connect the cable that connects the PDU to the network to the network connection port of the PDU.
4. Connect the PDU power cable to the AC power supply.

Note: We strongly recommend that you do not plug the ECO PDU power cord into the extender of multiple sockets to prevent it from being unable to get enough power to operate properly.

After connecting PDUs, power on PDUs and connected devices.

Note: It is strongly recommended that you use harness straps and cable boxes to secure cables to the front panel of the equipment. Prevent loose and poor contact in subsequent time.

This Page Intentionally Left Blank

Chapter 3


Basic Operation and First Time Setup

First Time Setup

After the PDU is installed on the shelf, the administrator needs to set network parameters and change the default value of super Administrator log-in Settings and new users. The most convenient way is to use a browser through the network log-in.

- Note:** 1. Since this is your first log-in, you can use the default log-in IP address: **192.168.0.100**, user name: **admin**, and default password: **admin123456**. For security reasons, you must change to your unique user name and password (See Changing Administrator Log-in for more information).
2. To log in to the network remotely, please refer to the IP address description.

After you log-in to the PDU successfully, the Socket Access/Connection page will appear:

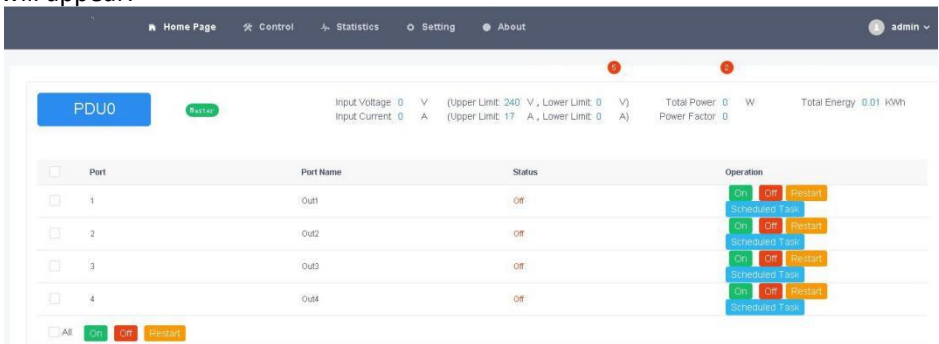


After log-in, the top pane of the page provides the following options for PDU operations: **Home Page, Control, Statistics, Settings, and About.** Click the corresponding TAB to select, set, and view the functions provided on the corresponding page.

Network Configuration

To configure the network, perform the following operations:

1. Click the **Setting** TAB.
2. The device configuration page is displayed. A screen similar to the

following should appear:

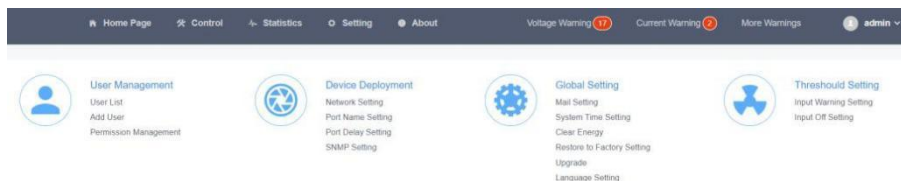

3. Please fill in the field data according to the information provided in the device setting instructions of **Network Setting**. Supports HTTPS access .Such as:


Adapter1

IP Addr	<input type="text" value="192.168.0.100"/>
Subnet Mask	<input type="text" value="255.255.255.0"/>
Gateway IP	<input type="text" value="192.168.0.1"/>
Primary DNS Server	<input type="text" value="8.8.8.8"/>
Secondary DNS	<input type="text" value="168.95.1.1"/>
Smart DHCP	<input checked="" type="checkbox"/>
NetBios Name	<input type="text" value="IPM-8221"/>
HTTP Port	<input type="text" value="80"/>
HTTPS Port	<input type="text" value="443"/>
Redirect	<input checked="" type="checkbox"/>

Change administrator log-in


To change the default user name and password of the super administrator, perform the following operations:

1. Click the User List in the User Management button at the top of the screen. A list of users is listed on the left side of the user administrator page, with their more detailed information displayed on a large block in the center.

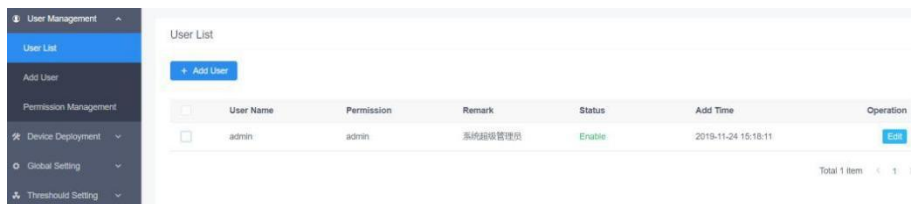

2. In the Administrator information section, select Edit to reset the unique name and password, then click **Save** (bottom of the page).

Note: If you forget the administrator account and password, please reset the host to restore the initial Settings, to restore the default administrator account.

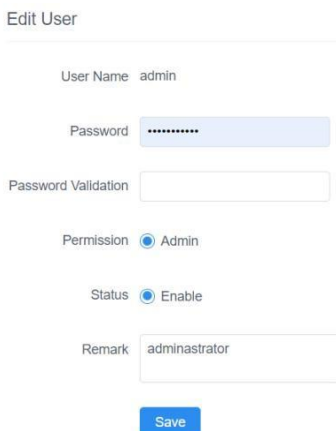The screenshot shows the 'Edit User' form. It has the following fields: 'User Name' (text input with 'admin'), 'Password' (password input with masked characters), 'Password Validation' (text input), 'Permission' (radio button selected for 'Admin'), 'Status' (radio button selected for 'Enable'), and 'Remark' (text input with 'adminaerator'). A blue 'Save' button is at the bottom.

Continue to perform

After you complete the network Settings and change the default administrator account and password, you can have other administrator accounts. Operation permissions, including new users, are explained in the next section.

This Page Intentionally Left Blank

Chapter 4

Browser Operation


Logging In

You can connect to PDUs from any platform with a web browser installed. To access the PDU, perform the following operations:

1. Open a browser and enter the IP address of the PDU that you want to access in the address box.

Note: You can use the default IP address **192.168.0.100** to log in to the PDU or use a new IP address after the PDU is changed. Remember that the new IP address is required for subsequent log-in.


2. After the security warning dialog box appears, please accept the authentication, which is reliable. Once accepted, a log-in screen will appear:

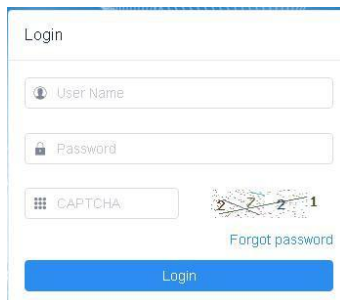A screenshot of a web browser showing a login page. The page has a title "Login" at the top. Below the title, there are three input fields: "User Name" with a user icon, "Password" with a lock icon, and "CAPTCHA" with a grid icon. To the right of the CAPTCHA field is a CAPTCHA image showing the number "2" repeated three times and the number "1". Below the CAPTCHA field is a link that says "Forgot password". At the bottom of the form is a blue button labeled "Login".

3. Enter a valid user name and password (set by the PDU administrator) and complete the password as prompted.
4. Click log-in to go to the main page of the browser.

The PDU Main Page

Once you have logged in successfully, the PDU home page will appear along with the socket access page:

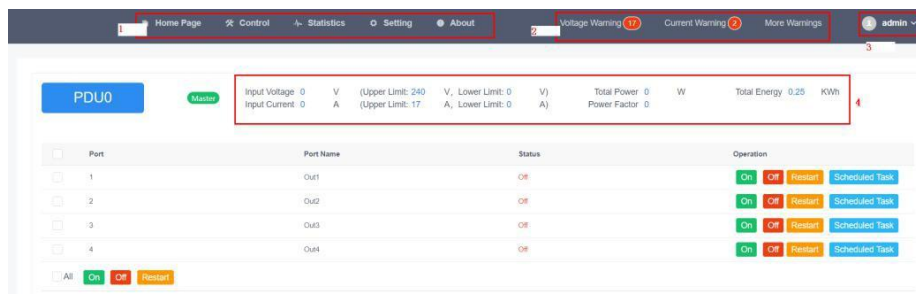

Note: The window shown above displays the contents of the administrator's page according to the type, authority, and PDU of each user. Depending on the model, items may not be displayed on all users' pages.

Page Components

Web page components are described as follows:

No.	Item	Description
1	Option Column	This option column contains the main operation categories of THE PDU. The items that appear in the option column vary according to the user type. This authorization option is set when the account is established.
2	Alarm Column	Lists the number of alarms related to the PDU running process. You can click to go to the details page to view the type and content of the alarm.
3	log-in options	You can perform log-in operations, such as refreshing, logging out, changing passwords, and querying logs.
4	PDU operating status	Provides real-time information about the device, such as power voltage, current, and power consumption.

Socket access

Online

When you log in to the PDU, the user interface will be displayed with the default socket access page and a menu.

The PDU status and socket status contents are displayed on the main block.

<input type="checkbox"/>	Port	Port Name	Status	Operation
<input type="checkbox"/>	1	Out1	Off	On Off Restart Scheduled Task
<input type="checkbox"/>	2	Out2	Off	On Off Restart Scheduled Task
<input type="checkbox"/>	3	Out3	Off	On Off Restart Scheduled Task
<input type="checkbox"/>	4	Out4	Off	On Off Restart Scheduled Task
All On Off Restart				

Note: Only PDUs with this function display the socket status sub-menu block. Other models only provide PDU status monitoring, which allows you to enable, disable, reset, and schedule tasks for corresponding port sockets. For detailed descriptions, refer to the subsequent chapters.

Control

On the menu bar of the home page, select Control to access the scheduled task options page of the PDU. You can query scheduled tasks and add new scheduled tasks for the socket.

Scheduled Task

Scheduled Tasks List

Add Scheduled Task

Scheduled Tasks List

Select Device PDU0 First Action 2021-12-01 2021-12-30 Search Clear + Add Scheduled Task

PDU	Port	First Action	Repeat	Remark	Operation
No Data					

In the schedule task list bar, you can retrieve the desired port schedule status by time.

Scheduled Task

Scheduled Tasks List

Add Scheduled Task

Add Scheduled Task

Select Device

PDU0

Select Port

All

Out1

Out2

Out3

Out4

Control Type

Off

Action Date

2021-12-01

Action Time

20:00:00

Repeat

Sun

Mon

Tue

Wed

Thu

Fri


Sat

Remark

Save

In the add scheduled task TAB, you can add scheduled tasks based on your requirements, such as socket port, switch type, time, working day, and remarks. Select the corresponding option and click the Save button to Save and generate a scheduled task. PDU will perform the corresponding scheduled task operation at the set time.


Statistics

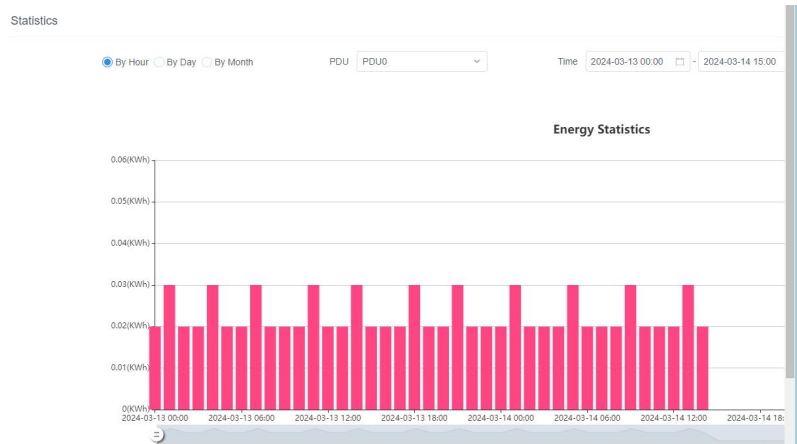

You can collect energy consumption statistics based on the specified query time range. Select a start time from the drop-down list box based on the date, month, and year. You can select energy consumption within 24 hours, the latest 7 days, 30 days, based on the quick selection function on the time bar.

Settings

Setting options includes **Account Management**, **Device Deployment**, **Global Settings**, and **Threshold Settings**. This option is available only to administrators. Common users cannot see this option.

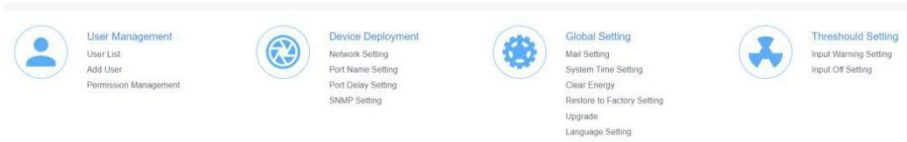

Account management

Sub-function options include Account list, Adding an account, and rights management.

User List

+ Add User

<input type="checkbox"/>	User Name	Permission	Remark	Status	Add Time	Operation
<input type="checkbox"/>	user1	visitor	user	Enable	2021-12-31 08:42:48	Edit Delete
<input type="checkbox"/>	admin	admin	super admin	Enable	2019-11-24 15:18:11	Edit

Total 2 Items < 1 >

If you log in to the PDU as an administrator, the account list displays information about all accounts in the PDU system. The administrator has the permission to add, delete, and edit accounts. The default administrator account can only be edited but cannot be deleted.

Add User

User Name

Password

Password Validation

Permission ☐ Operator ☒ Visitor

Status ☒ Enable ☐ Disable

Remark

After logging in as an administrator, you can use this function to add new accounts and select corresponding permissions.

Permission Management

Operator Visitor

<input checked="" type="checkbox"/> Operate Ports	<input type="checkbox"/> User Management	<input checked="" type="checkbox"/> Manage Scheduled Task	<input checked="" type="checkbox"/> Port Name Setting
<input checked="" type="checkbox"/> Port Delay Setting	<input type="checkbox"/> System Time Setting	<input checked="" type="checkbox"/> Clear Energy	<input checked="" type="checkbox"/> Language Setting
<input checked="" type="checkbox"/> Input Warning Setting	<input checked="" type="checkbox"/> Output Warning Setting	<input checked="" type="checkbox"/> Output Off Setting	<input checked="" type="checkbox"/> Temp & Humi Warning Setting
<input checked="" type="checkbox"/> View System Logs	<input checked="" type="checkbox"/> View User Operation Logs	<input checked="" type="checkbox"/> Statistics	

There are two levels of permission management options: operator and browsing user. Operator rights provides functions related to PDU operations. If selected, the corresponding rights take effect and the operator is granted the operation rights.

Permission Management

Operator Visitor

<input checked="" type="checkbox"/> View System Logs	<input checked="" type="checkbox"/> View User Operation Logs	<input checked="" type="checkbox"/> Statistics
--	--	--

Browsing permission This section describes how to query system logs, operation logs, and statistics. You can select the corresponding options to assign the browsing permission to users.

The equipment deployment

Sub-function options include network Settings, port name Settings, port delay

Settings, and SNMP Settings

Network Setting

IP Addr

192.168.0.100

Subnet Mask

255.255.255.0

Gateway IP

192.168.0.1

Primary DNS Server

223.5.5.5

Secondary DNS

8.8.8.1

Smart DHCP

☐

NetBios Name

ippdu

HTTP Port

80

HTTPS Port

443

Redirect

☒

Save

The default IP address is **192.168.0.100**. You can reset the IP address and network Settings based on your IP address segment. Click **SAVE** to Save the new Settings. .

Note: You can restart the PDU in two ways:

1. Press the embedded RST reset button at the front of the PDU with a needle, such as the end of a paper clip, to restart the PDU.
2. On the WEB page of the PDU, select The Upgrade option in Global Setting and click Restart to Restart the DEVICE.

Port Name Setting

PDU: PDU 0

Name: PDU0

Port Name:

Port	Name
Port1	Out1
Port2	Out2
Port3	Out3
Port4	Out4

Save

You can name the PDU or the socket of the PDU control port. After the name is changed, click the Save button to Save the Settings.

Port Delay Setting

PDD: PDU0

Port	On Delay(Second)	Off Delay(Second)	Restart Delay(Second)
Out1	1	0	1
Out2	2	2	2
Out3	3	3	3
Out4	4	4	4

Save

Port delay setting function allows you to set the opening and closing delay time of the port socket. By default, the switching interval of the adjacent port is 1 second. You can also modify the interval delay time according to your needs.

Note: The delay time of the port socket is intended to protect the electrical appliance from experiencing the shock of current and voltage at the moment of power-on, thus protecting the electrical appliance from damage. It is strongly recommended to retain the default delay setting.

SNMP Setting

SNMP Agent On ☒

Communit

Permission

TRAP On

Reception Addr

SNMP Settings. If this function is enabled, an alarm will be sounded and E-mail message will be sent when the circuit breaker trips or the PDU/ socket threshold is set beyond the minimum or maximum setting range.

Global Settings

Sub-function options include: **Mail Settings, System Time Settings, Electricity Meter Reset, Factory Reset, System Upgrade, Language Settings**

Mail Setting

Account setting Receiver List Send Logs

SMTP Server

Port

Sender

Password

Enable Mail ☒ Enable ☐ Disable

The email setting function allows you to send PDU alarms and logs to a specified email address after setting an email address. After setting the email address, you can send a test email to check whether the email address is correct.

Mail Setting

Account setting

Receiver List

Send Logs

Name

Mail Box

Search

Clear

+ Add

Name	Mail Box	Status	Operation
Eddie	610114768@qq.com	Enable	<div>Edit</div> <div>Delete</div>
Eddie	zhu_huijia0001@126.com	Enable	<div>Edit</div> <div>Delete</div>

You can search, query, edit, and delete email addresses in the receiving email list, and enable or disable email sending Settings. It is convenient for you to adjust according to the actual application situation.

Mail Setting

Account setting

Receiver List

Send Logs

PDU

PDU0

Time

Search

<input type="checkbox"/>	Device Name	Reception Mail Box	Content	Send Time	Operation
<input checked="" type="checkbox"/>	PDU0	Eddie.zhu_huijia0001@126.com m:Eddie.610114768@qq.com	The input voltage is under lower limit!	2021-12-29 10:56:34	<div>Delete</div> <div>Export</div>
<input checked="" type="checkbox"/>	PDU0	Eddie.zhu_huijia0001@126.com	The input voltage is under lower limit!	2021-12-29 10:52:06	<div>Delete</div> <div>Export</div>
<input type="checkbox"/>	PDU0	Eddie.zhu_huijia0001@126.com	The input voltage is under lower limit!	2021-12-29 10:50:18	<div>Delete</div> <div>Export</div>

Delete

Export

Mail logs record sent mail information. You can query, delete, or export mail logs based on the time setting.

System Time Setting

System Time 2021-12-31 11:11:39

Set time

Synchronize from Computer Time

Save

System time You can set the system time of the PDU and synchronize the time with the browser you log in to.

Clear Energy

PDU PDU0

Total Energy 0.25 kW

Clear Energy

The meter reset function can reset the accumulated electric quantity of THE PDU. After setting, the PDU system will restart the calculation of accumulated electric quantity.

Restore to Factory Setting

PDU PDU0

Restore to Factory Setting(Device Will Reboot after restoration)

Restore to Factory Setting

The factory setting restoration function restores the PDU to its factory Settings and deletes all records and information in the PDU. Exercise caution when performing this operation. After the default Settings are restored, the system restarts. You can perform related operations, such as setting PDUs again.

Upgrade

Upgrade File Select upgrade file

Restart

After system upgrade, you can query the latest version of the PDU software you use on our website, download the file and save it in the specified file directory on the PC, select the upgrade file to complete the software update of the PDU system, and restart the PDU system after the system is updated.

Language Setting

Language English

Save

Language setting: The PDU currently supports two languages: Chinese and English. If there is a new language package, you can follow the latest upgrade program to upgrade the system and complete the

multi-language conversion. Select the system language you want through the drop down option, click the **Save** button and the system will be changed to the language you selected.

Threshold Settings

Sub-function options include **Alarm Setting** and **Power Off Settings**.

Input Warning Setting

PDU

PDU0

Voltage Upper Limit

240

V

Voltage Lower Limit

0

V

Current Upper Limit

17

A

Current Lower Limit

0

A

Save

Alarm Settings. You can set the maximum and minimum values of the input current and voltage. When the current or voltage exceeds the threshold, the PDU automatically sends alarm logs to the specified email box address, and an alarm message is displayed on the home page, facilitating query and handling after your next log-in.

Input Off Setting

PDU

PDU0

Current Upper Limit

20

A

Current Lower Limit

0

A

Save

Input current power off setting, this function is mainly to prevent excessive current damage to electrical equipment and line, reach the maximum or minimum range of current you set, will trigger the system power off.

Note: Set the current threshold appropriately according to PDU parameters. Incorrect current setting may cause the PDU to fail to provide power output or effectively protect electrical devices and circuits when excessive current occurs.

About

You can obtain the network configuration information, name, hardware version information, and device serial number of the PDU.

About

All Rights Reserved: Copyright Info

IP Addr: 192.168.0.100

Subnet Mask: 255.255.255.0

Gateway: 192.168.0.1

Primary DNS Server: 223.5.5.5

Secondary DNS Server: 8.8.8.1

Device Name: PDU0

Device UID: G062000000000000

Hw Version: v1.1

Sw Version: 1.6.3

Product Serial: 123456

Logs

Logs are classified into two types: **System Logs** and **User Operation**

Logs

System Logs

Time

Type

Read

Search

Time	Event Type	Description	Status
2021-12-29 11:13:23	Input Voltage Warning	Input voltage warning: Below lower limit	Not Read
2021-12-29 10:56:34	Input Voltage Warning	Input voltage warning: Below lower limit	Not Read
2021-12-29 10:52:06	Input Voltage Warning	Input voltage warning: Below lower limit	Not Read
2021-12-29 10:50:18	Input Voltage Warning	Input voltage warning: Below lower limit	Not Read
2021-12-29 10:48:30	Input Voltage Warning	Input voltage warning: Below lower limit	Not Read
2021-12-29 10:47:19	Input Voltage Warning	Input voltage warning: Below lower limit	Not Read
2021-12-29 10:44:48	Input Voltage Warning	Input voltage warning: Below lower limit	Not Read
2021-12-29 10:43:23	Input Voltage Warning	Input voltage warning: Below lower limit	Not Read
2021-12-29 10:41:23	Input Voltage Warning	Input voltage warning: Below lower limit	Not Read

You can click the **More Warnings** button in the upper part of the main window to implement system logs. The system log list is displayed in the pop-up window. You can view the time, type, and description of system logs.

User Operation Logs

Time

Search

Time	User	Description	IP
2021-12-31 09:25:08		A user is modified 【.user1】	192.168.0.153
2021-12-31 08:42:48		A user is added 【.user1】	192.168.0.153
2021-12-30 16:09:44		A user is modified 【.admin】	192.168.0.153
2021-12-30 15:27:42		On 【.addr:0】	192.168.0.153
2021-12-30 15:27:42		On 【.addr:0】	192.168.0.153
2021-12-30 15:27:23		On 【.addr:0】	192.168.0.153
2021-12-29 11:14:12		修改了输入告警设置 【.addr:0】	192.168.0.150
2021-12-29 11:13:14		修改了输入告警设置 【.addr:0】	192.168.0.150
2021-12-29 10:57:46		Input warning settings are modified 【.addr:0】	192.168.0.150

User Operation Logs , You can click the log-in user drop-down list in the upper right corner of the window and choose Operation Logs to display the user Operation Logs window, which displays the log time, user, log description, and accessed IP address.

This Page Intentionally Left Blank

Appendix

Safety Instructions

General

- ♦ This product is for indoor use only.
- ♦ Read all of these instructions. Save them for future reference.
- ♦ Follow all warnings and instructions marked on the device.
- ♦ Do not place the device on any unstable surface (cart, stand, table, etc.).
If the device falls, serious damage will result.
- ♦ Do not use the device near water.
- ♦ Do not place the device near, or over, radiators or heat registers.
- ♦ The device cabinet is provided with slots and openings to allow for adequate ventilation. To ensure reliable operation, and to protect against overheating, these openings must never be blocked or covered.
- ♦ The device should never be placed on a soft surface (bed, sofa, rug, etc.) as this will block its ventilation openings. Likewise, the device should not be placed in a built in enclosure unless adequate ventilation has been provided.
- ♦ Never spill liquid of any kind on the device.
- ♦ Unplug the device from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- ♦ The device should be operated from the type of power source indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- ♦ This equipment is designed to be equipped with 100- 230V alternating IT power distribution system.
- ♦ To prevent damage to your installation it is important that all devices are properly grounded.

◆ The device is equipped with a 3-wire grounding type plug. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not attempt to defeat the purpose of the grounding-type plug. Always follow your local/national wiring codes.

◆ Do not allow anything to rest on the power cord or cables. Route the power cord and cables so that they cannot be stepped on or tripped over.

◆ To help protect your system from sudden, transient increases and decreases in electrical power, use a surge suppressor, line conditioner, or uninterruptible power supply (UPS).

◆ Position system cables and power cables carefully; Be sure that nothing rests on any cables.

◆ When connecting or disconnecting power to hot pluggable power supplies, observe the following guidelines:

◆ Install the power supply before connecting the power cable to the power supply.

◆ Unplug the power cable before removing the power supply.

◆ If the system has multiple sources of power, disconnect power from the system by unplugging all power cables from the power supplies

◆ Never push objects of any kind into or through cabinet slots. They may touch dangerous voltage points or short out parts resulting in a risk of fire or electrical shock

◆ Do not attempt to service the device yourself. Refer all servicing to qualified service personnel

◆ If the following conditions occur, unplug the device from the wall outlet and bring it to qualified service personnel for repair.

◆ The power cord or plug has become damaged or frayed.

◆ Liquid has been spilled into the device.

◆ The device has been exposed to rain or water.

◆ The device has been dropped, or the cabinet has been damaged.

◆ The device exhibits a distinct change in performance, indicating a need

for service.

- ♦ The device does not operate normally when the operating instructions are followed.

- ♦ Only adjust those controls that are covered in the operating instructions.

Improper adjustment of other controls may result in damage that will require extensive work by a qualified technician to repair.

Rack Mounting

- ♦ When extending the device out of the rack, ensure that the rack is smooth and stable.

- ♦ Do not overload the AC branches that supply power to the frame;
The carrying capacity of the whole frame should not exceed eighty percent of the power of the branch.

- ♦ Make sure that all equipment used on the rack – including power strips and other electrical connectors – is properly grounded.

- ♦ Ensure that proper airflow is provided to devices in the rack.

- ♦ Ensure that the operating ambient temperature of the rack environment does not exceed the maximum ambient temperature specified for the equipment by the manufacturer

- ♦ Do not step on or stand on any device when servicing other devices in a rack.

The Eco PDU's Main Power Cord

Please use the power cord attached to this package. If it is necessary to replace the power cord attached to this package with another power cord,

Please confirm that the power cable must meet at least the cable standards attached to this package.

IP Address Determination

If you are an administrator and log in for the first time, you must connect the switcher to assign an IP address for user access. The PDU device provides the means that, in each case, your computer must be on the same network segment as the switcher; When you are connected and logged in, you can assign a fixed network address to the device.

Specific methods are as follows:

1. Set the IP address of your PC to 192.168.0.xxx. Here XXX represents any number other than 100. (192.168.0.100 is the default address of switcher)
2. In the network address column of your browser, enter the recognized IP address of the switcher you want to connect to (192.168.0.100).
3. When you are connected and logged in, assign a set of fixed IP addresses corresponding to its Network segment to the device (see Network Setting).
4. After you log out, be sure to reset your computer IP address back to the original value.
5. Once you are logged in, please go to the Network Settings page to set up a temporary IP environment.

Specifications

American Type:

Function			LIS-0216AM	LIS-0316AM	LIS-0416AM
Power	Direct		2	3	4
Connectors	Power Inlet		IEC C14		
	Power Outlets		American standard three hole socket		
	LAN		1 x RJ-45 (F)		
LEDs	Outlet Status		2/3/4(Green)		
	Power		1 (Green)		
	LAN	10/100M	1 (Orange / Green)		
		Link	1 (Green)		
Switches	Reset		1 x Semi-recessed button		
	Restore default Settings		1 x Semi-recessed button		
	Power		1 x Rocker Switch		
I/P Rating			100–240V~; 50/60Hz; 16A		
Load Capacity			3840W		
O/P Rating	Per Port		100–240V~; 50/60Hz; 10A		
	Total		100–240V~; 50/60Hz; 16A		
Environment	Operating Temperature		0–50°C		
	Storage Temperature		-20–60°C		
	Humidity		0–80% RH Non-condensing		
Physical Properties	Housing		Metal		
	Weight		0.8 kg	0.85Kg	0.9Kg
	Dimensions (L x W x H)		198*133*44.5mm		

C13 Type:

Function			LIS-0216WN	LIS-0316WN	LIS-0416WN
Power	Direct		2	3	4
Connectors	Power Inlet		IEC C14		
	Power Outlets		IEC C13		
	LAN		1 x RJ-45 (F)		
LEDs	Outlet Status		2/3/4(Green)		
	Power		1 (Green)		
	LAN	10/100M	1 (Orange / Green)		
		Link	1 (Green)		
Switches	Reset		1 x Semi-recessed button		
	Restore default Settings		1 x Semi-recessed button		
	Power		1 x Rocker Switch		
I/P Rating			100–240V~; 50/60Hz; 16A		
Load Capacity			3840W		
O/P Rating	Per Port		100–240V~; 50/60Hz; 10A		
	Total		100–240V~; 50/60Hz; 16A		
Environment	Operating Temperature		0–50°C		
	Storage Temperature		-20–60°C		
	Humidity		0–80% RH Non-condensing		
Physical Properties	Housing		Metal		
	Weight		0.8 kg	0.85Kg	0.9Kg
	Dimensions (L x W x H)		198*133*44.5mm		

EU Type:

Function			LIS-0216EU	LIS-0316EU	LIS-0416EU
Power	Direct		2	3	4
Connectors	Power Inlet		IEC C14		
	PowerOutlets		EU Socket		
	LAN		1 x RJ-45 (F)		
LEDs	Outlet Status		2/3/4(Green)		
	Power		1 (Green)		
	LAN	10/100M	1 (Orange / Green)		
		Link	1 (Green)		
Switches	Reset		1 x Semi-recessed button		
	Restore default Settings		1 x Semi-recessed button		
	Power		1 x Rocker Switch		
I/P Rating			100–240V~; 50/60Hz; 16A		
Load Capacity			3840W		
O/P Rating	Per Port		100–240V~; 50/60Hz; 10A		
	Total		100–240V~; 50/60Hz; 16A		
Environment	Operating Temperature		0–50°C		
	Storage Temperature		-20–60°C		
	Humidity		0–80% RH Non-condensing		
Physical Properties	Housing		Metal		
	Weight		0.8 kg	0.85Kg	0.9Kg
	Dimensions (L x W x H)		198*133*44.5mm		